LRF100H LiDAR Series Based on DTOF Principle

1KHz Measuring Frequency / 100 meters Range / Ambient Light Immunity 100Klux / Cost-effective

Features

- Based on DTOF principle (Direct Time of Flight)
- Maximum Measuring Range：100m
- Measuring Blind Zone：5cm
- Measuring Frequency：1KHz
- Accuracy：±10cm (<10m), 1% (≥10m)
- Resolution：1cm
- Operating Temperature：-20℃-+60℃
- Supply Voltage：9-36VDC
- Compact Size：33mm x 34mm x 18mm
- Weight：20±2g
- Ambient Light Immunity：100Klux



Applications

- Drone Attitude Holding (Inspection Drone)
- Wind Power
- Landslide Monitoring
- Material Level Detection



ERDILRF · erdilrf.com · tommy@erdimail.com · +86 133 0819 5790

1. Product Overview


LRF100H is a mid-long-range LiDAR with high accuracy, supporting various in-door and out-door applications. It is able to resist strong electromagnetic interference, and can be used for positioning or collision avoidance monitoring of land transport vehicles and overhead bridge cranes.

2. Specifications

#	Model	LRF100H
1	Range	0.05m ~ 100m (90%reflectivity), 0.05m ~ 30m (10%reflectivity)
2	Frequency	20Hz ~ 10KHz (Default: 1KHz)
3	Accuracy	±10cm (<10m), 1% (≥10m)
4	Repeatability	±5cm (<10m), ±10cm@100m
5	Ambient Light Immunity	100KLux
6	Central Wavelength	905nm
7	Photobiological Safety	Class1
8	FOV	about 4mrad
9	Wavelength for Indication	N/A
10	Photobiological Safety for Indication	N/A
11	Supply Voltage	9 ~ 36VDC
12	Peak Current	100mA
13	Average Current	30mA
14	Average Power Consumption	0.7W
15	Communication Interface	UART,IIC
16	Protection Level	N/A
17	Dimension	33 x 34 x 18 mm
18	Weight	20±2g
19	Operating Temperature	-20℃ ~ +60℃
20	Wire Specification	1.25mm，5P 50cm stranded wires
21	Customization	available in appearance / structure / output protocol


ERDILRF · erdilrf.com · tommy@erdimail.com · +86 133 0819 5790

3. Definitions of Pins

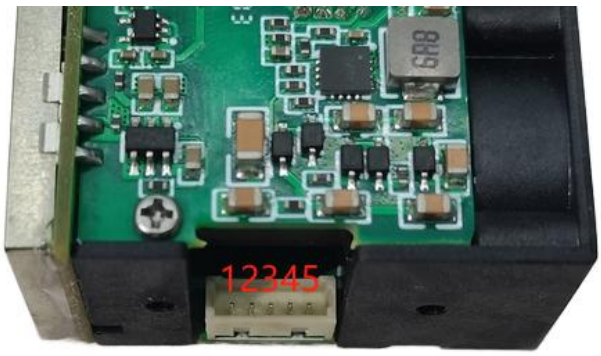

No.	Definition / Wire Color	User Interface
1	9-36V (Red)	External Power +
2	Power GND (Black)	External Power -
3	Port GND (Yellow)	GND
4	TX (Green)	RX
5	RX (Blue)	TX

4. Dimensions

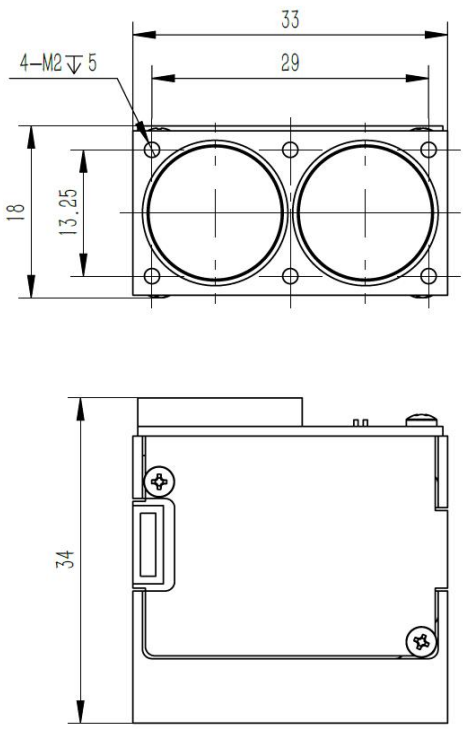

ERDILRF · erdilrf.com · tommy@erdimail.com · +86 133 0819 5790

5..Communication Protocol: UART

5.1 Communication Interface

UART	
Baud Rate	460800 (adjustable)
Data Bit	8
Stop Bit	1
Parity Bit	None

5.2 Data Communication Protocol
For both input and output, this product adopts Hexadecimal Little-Endian Mode 4-Byte Output

(1) Default frequency 1kHz. One full data has 4 bytes. The format shown as follows:

Frame Header	Distance 2 Bytes		Check Byte
5C	02	11	EC

5C: Frame header 1 byte

02 11: Distance value 2 bytes means the measuring distance is 4354cm, little-endian, range 0-65535cm. When out of range, it would output 65535cm.

EC: From 02 to 11, opposite of the Check byte, 1 byte

(2) Set and Read Commands:

①Reading serial no.

Send	5A	0D	02	0D	0D	Check
Return	5A	8D	02	10	01	Check

10 01 means the serial no. is 272: little-endian, the serial no. shown in the upper computer is: S00272 (Add S before the number).

②UART Baud rate setting

Send	5A	06	02	80	04	Check
Return	5A	86	02	80	04	Check

80 04 as a decimal is 1152: little-endian, it means the baud rate is set to 115200=1152*100

The following list shows 7 available baud rates. Other baud rate settings would

ERDILRF · erdilrf.com · tommy@erdimail.com · +86 133 0819 5790

not get respond.

Hexadecimal (little-	Decimal	Baud rate
60 00	96	9600
C0 00	192	19200
80 01	384	38400
80 04	1152	115200
00 09	2304	230400
00 0A	2560	256000
00 12	4608	460800

③Read the software version no.

Send	5A	16	02	16	16	Check
Return	5A	96	02	03	02	Check

03 02 means the software version no. is V2.3: little-endian, 02 represents 2, 03 represents 3, Add a point (.) in the middle.

④Output frequency setting

Send	5A	0B	02	E7	03	Check
Return	5A	8B	02	E7	03	Check

E7 03 means the frequency division is set to 999： little-endian, here the frequency is set to f=1000000/(999+1)=1000Hz.

5.3 Check function :


Begin with the second byte and end with the last second byte, find the inverse of the sum.

```
uint8_t Check_Sum(uint8_t *_pbuff, uint16_t _cmdLen)
{
uint8_t cmd_sum=0;
uint16_t i;
for(i=0;i<_cmdLen;i++)
{
cmd_sum += _pbuff[i];
  }
  cmd_sum = (~cmd_sum);
  return  cmd_sum;
}
```


ERDILRF · erdilrf.com · tommy@erdimail.com · +86 133 0819 5790

6. Quick Test

Test materials: TTL to USB adapter board, DC power, upper computer / serial port assistant.

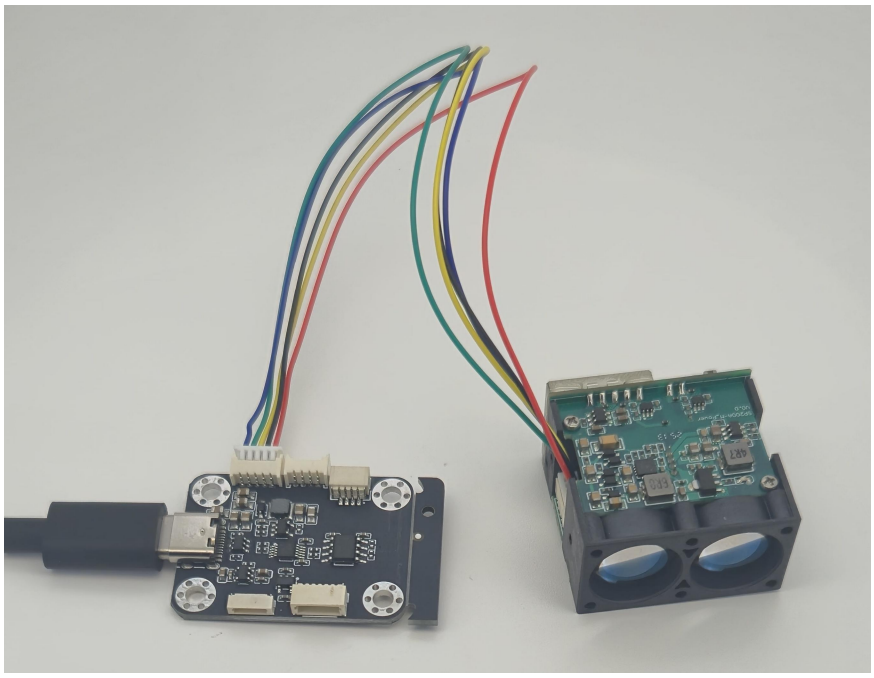

After the LRF100H successfully connected to your computer， select the baud rate and click “connect”, then the data can be monitored on the upper computer.

Area 1: Set the parameters and click “connect”

Area 2: Set the baud rate

Area 3: Read the serial no.


Area 4: Read the software version no.

Connect the TTL-USB adapter board to the computer, and then click “detect the serial port”. When the serial port no. comes out, click “connect” (it is shown as the default in the following figure). The default frequency is 1000/50Hz, and the default baud rate is 460800 (adjustable). Data bit 8, stop bit 1, no parity bit.

The LRF100H ranging module actively output data (4 bytes each frame) after completing the connection. When out of its measuring range, it would output 0xFFFF (65535).

Here is a sample figure of upper computer:

ERDILRF · erdilrf.com · tommy@erdimail.com · +86 133 0819 5790

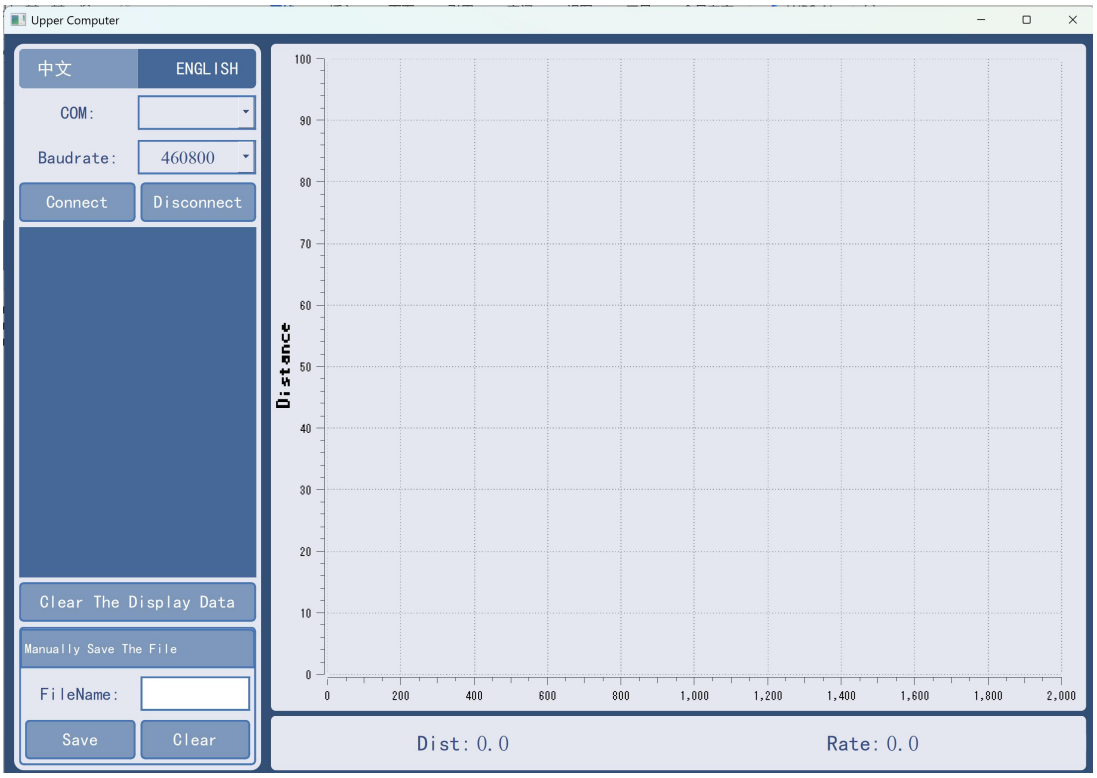

7. Update History

Version	Date (YY/MM/DD)	Content
V0.5	22/08/31	Mass produced first editions
V1.0	24/12/30	Updated the format
V2.0	25/03/05	Revised some parameters

ERDILRF · erdilrf.com · tommy@erdimail.com · +86 133 0819 5790